

FAULT CODE INDEX

1. UV LED Blinking – UV Error
2. Heating and Service LED Blink Simultaneously – Hot Water Sensor Error
3. Chilling and Service LED Light Blink Simultaneously – Cold Water Sensor Error
4. Heating and Service LED Alternate Blinking –Low Water Level Error
5. Chilling and Service LED Alternate Blinking – Full Water Level Error
6. Heating, Chilling and Service LED Sequentially Blink
7. Service LED is On – Leak Detection Probe Has Detected Water

UV LED Blinking – UV Error

Possible Reason	Solution
UV Lamp or Pump is Not Operational	Check Connections to UV Lamp / Pump Assembly. Replace UV Lamp / Pump Assembly as needed.

Heating and Service LED Blink Simultaneously – Hot Water Sensor Error

Possible Reason	Solution
Sensor not connected or is not operating within set parameters	<ol style="list-style-type: none"> 1. Check connection to Hot water sensor. 2. Check OHMS reading – above 900K indicates open sensor. Below 5.2K indicates sensor short. <p>Replace Hot Water Sensor.</p>

Chilling and Service LED Light Blink Simultaneously – Cold Water Sensor Error

Possible Reason	Solution
Sensor is not connected or is not operating within set parameters	<ol style="list-style-type: none"> 1. Check connection to Cold Water Sensor. 2. Check OHMS reading – above 690K Indicates Open Sensor, below 7.3K indicates Sensor Short. <p>Replace Cold Water Sensor.</p>

Heating and Service LED Alternate Blinking –Low Water Level Error

Possible Reason	Solution
Full level sensor has detected water, but low level is not detected	Check connection to low water level sensor. Replace low water level sensor.

Chilling and Service LED Alternate Blinking – Full Water Level Error

Possible Reason	Solution
Low Level and Overflow Sensors indicted water but full level sensor is not detected	Check connection to low water level sensor. Replace full water level sensor.

Heating, Chilling and Service LED Sequentially Blink

Possible Reason	Solution
Overflow sensor has detected water but neither low or full sensors are detected	Check connections to both low and full water sensors. Replace both Low Water and Full Water Sensors.

Heating, Chilling and Service LED Blinks Simultaneously

Possible Reason	Solution
All three level sensors have detected water	Check Feed Valve for Debris. Clean or replace feed valve.

Service LED is On – Leak Detection Probe Has Detected Water

Possible Reason	Solution
Dry inside of unit and leak detector.	Check unit for leak and repair or replace faulty parts.