

PRE-INSTALLATION PROCEDURES

⚠ DANGER! ELECTRICAL SHOCK HAZARD.

Only qualified personnel who have read and understand this entire manual should attempt to install, or service this unit, failure to do so could result in death or serious injury. DO NOT plug into an electrical supply until specifically instructed.

⚠ WARNING! ALWAYS SANITIZE BEFORE USE.

Sanitize before use to eliminate any potential microbiological contaminants.

Red Compressor/Heater Switch must be in the O=OFF position while the Hot Tank is empty. Damage could occur within one minute and the two Hot Tank Overload Devices (High Safety Limit) require manual reset if heater is turned on with an empty Hot Tank.



⚠ CAUTION! DRIP TRAY DRAIN.

If you intend to provide a drip tray drain for your customer, be aware that you will be called multiple times per month to service and unclog the tubing leading away from the drip tray to drain. Users will clog the drain with paper clips, erasers, napkins, tea bags, gum, and various other intended items. Waterlogic recommends you establish a minimum of weekly visits to the machine for cleaning of the drip tray drain.

Materials Needed:

- Personal Protective Equipment. Rubber or Nitrile Safety Gloves and Protective Eyewear
- Phillips Screwdriver
- Temperature Gage
- Water Pitcher or Container to collect water from the faucet
- 5-gallon container or drain basin
- Sanitizer - Household Bleach (5.25% Sodium Hypochlorite) or Citric Acid Based Cleaner
- Tapered Tip Squirt Bottle
- ¼" Plastic Tubing, at least 4 feet in length, and assorted ¼" quick connect fittings
- TDS Meter and Test Strips for measuring chlorine - Optional

1. Unpack the **Waterlogic infiniti Water Treatment System**, and check exterior for damage.

Flush Filters

⚠ CAUTION! FILTER FLUSH REQUIRED.

infiniti Water Treatment Systems, are not supplied with filters. Filters should be configured to optimize your system. Filters need to be configured and specified to do the job given the local water conditions, usage, maintenance schedule, and placement restrictions.

In order for our filters to perform as represented and to provide the best quality water possible, it is essential that filters be replaced periodically. The frequency of filter changes depends upon your

water quality and your water usage. For example, if there is a lot of sediment and/or particles in your water, then you will have to change your filters more frequently than a location with little to no sediment. Be sure to replace your filters whenever you notice a decline in the performance, whether it is a drop in flow rate and/or pressure or an unusual taste in the water.

2. Flush thoroughly per filter manufacturers' recommendation with fresh water to drain.
3. Once flushed, install the filters. Following the flow direction on the filter.

NOTE: Filters should not be flushed prior to 24 hours before installation to limit Microbial Growth.

Sanitizing

Sanitize using a Household Bleach (5.25% Sodium Hypochlorite solution) or other approved cleaner throughout the cold water circuit. Follow all instructions on the sanitizer and flush with fresh water through the faucet until odor and taste is acceptable.

⚠ WARNING! USE PROPER PERSONAL PROTECTIVE EQUIPMENT

Always ensure proper ventilation and use proper personal protective equipment such as gloves and eye protection when using chemicals. Refer to Material Safety Data Sheet for specific requirements of each chemical product. Take all necessary precautions to prevent sanitizer from contacting eyes, clothing, and any other surfaces in could damage (carpets).

4. Put sanitizer in the filter housing.
5. Turn off the water supply to the water cooler and release the internal water pressure by depressing the dispense button momentarily and remove the water supply pipe.
6. Isolate the power to the water cooler.
7. Bypass the internal twist filters to avoid mixing sanitizing solution with the active carbon. This is done by disconnecting the tubing to the inlet of the filters and attaching this tube to the inlet of the solenoid valves.
8. Connect the outlet of the sanitizing filter housing to the inlet of the water cooler and connect the supply water pipe to the inlet of the filter housing.
9. Turn on the power and water supply to the water cooler.

Fill the Cold Circuit with Sanitizer

10. Depress the cold water dispense button until the sanitization fluid starts to flow out of the faucet nipple.

11. Allow the sanitization fluid to stand in the water cooler for 10 minutes. *Do not let any sanitization fluid enter the hot tank.*

Flushing the Sanitizer from the Machine

12. Flush the cold water until the water runs clear of sanitizer.
13. Again isolate the water to the water cooler and release any internal water pressure.
14. Isolate the electrical power.
15. If this procedure is being done in conjunction with the annual service, change the filters.

⚠ WARNING! *Use Personal Protective Equipment. Gloves and Eye Protection Required. The first 2 or 3 gallons of water will contain concentrated sanitizer. Use extreme care!*

Fill the Hot Tank

16. Press the Hot Water Select Button, followed by the main dispensing button to fill the hot tank. Water will dispense from the faucet once the hot tank is full. Flush until water is clear.

⚠ WARNING! **HOT CIRCUIT IS NOT SANITIZED.**

Water in the hot circuit is not sanitary until the temperature exceeds 171°F (77°C) for at least 5 minutes.

Heater Test

17. Always ensure tanks are full of water before turning on the heater or the overload (high limit) will open and require manual reset. It will take the heater approximately 10 minutes to heat the water from ambient 75°F (24°C) to the factory set point of 185°F (85°C). Dispense a cup of hot water to ensure the temperature/odor/taste is acceptable.

⚠ WARNING! **VERY HOT WATER CAN BURN OR SCALD.**

Hot water should be dispensed carefully into insulated container to avoid injury.



Waterlogic *infiniti* COUNTER TOP DRAINING INSTRUCTIONS

Draining Notes

Drain the *Waterlogic infinity Water Treatment System* for transportation.

⚠ WARNING! STORE UNIT EMPTY. ALWAYS SANITIZE BEFORE REUSE.

The unit must be completely drained and sealed before storing to avoid stagnation and reduce microbial growth.

Prior to draining the hot tank, turn off the Red Heater and Compressor Power Switch (O=OFF).



Allow Hot Water to cool off prior to draining.

⚠ WARNING! HOT WATER. *The infinity Water Treatment System produces Hot Water up to 188°F. Water above 125° can cause severe burns or scalding. Hot water should be dispensed carefully into insulated container to avoid injury.*

Disable Cold and Hot Tanks

1. Turn off the Red Heater and Compressor Power Switch (O=OFF) to disable the heater and compressor.




Turn off Water Supply

2. Isolate the *infinity Water Treatment System* from feed water by turning off the supply.

Drain the Cold Water Tank and Circuit

3. Remove the Front Cover.
4. Remove the Faucet, and move the Front Cover to the top of the *infinity Water Treatment System* to gain access to the draining tubes
5. Remove tubing from JG fittings, and allow water to drain into drains, catch basin, etc.
6. Reinstall tubing into JG fittings, Faucet, and Front Cover

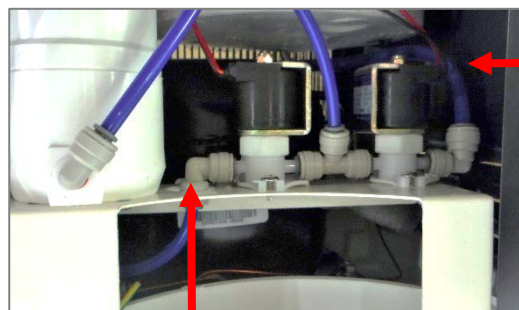

Waterlogic *infiniti* DRAINING TOWER INSTRUCTIONS

Draining Notes

Drain the **Waterlogic *infiniti* Water Treatment System**, for transportation.

⚠ WARNING! STORE UNIT EMPTY. ALWAYS SANITIZE BEFORE REUSE.

The unit must be completely drained and sealed before storing to avoid stagnation and reduce microbial growth).

Prior to draining the hot tank, turn off the Red Heater and Compressor Power Switch (O=OFF), and dispense 2 liters of hot water from the machine. As hot water is dispensed from the faucet of the ***infiniti* Water Treatment System**, colder water will be introduced into the hot tank. Since the Red Heater and Compressor Power Switch is turned off, the heater will not energize and heat the incoming tap water. Following this precaution prevents exposing personnel and equipment (drains, catch basin, etc.) to scalding hot water.



Disable Cold and Hot Tanks

1. Turn off the Red Heater and Compressor Power Switch (O-OFF) to disable the heater and compressor.
2. Dispense 2 liters of water through the hot tank to cool the water temperature in the hot tank and avoid burns.




⚠ WARNING! HOT WATER. The ***infiniti* Water Treatment System** produces Hot Water up to 188°F. Water above 125° can cause severe burns or scalding. Hot water should be dispensed carefully into insulated container to avoid injury.

Turn off Water Supply and Bleed Water Pressure


1. Isolate the ***infiniti* Water Treatment System** from feed water by turning off the supply.
2. Dispense cold still water to relieve any pressure built up in the system.

Drain the Cold Water Tank and Circuit

3. Remove lower front panel to access tank feed lines.

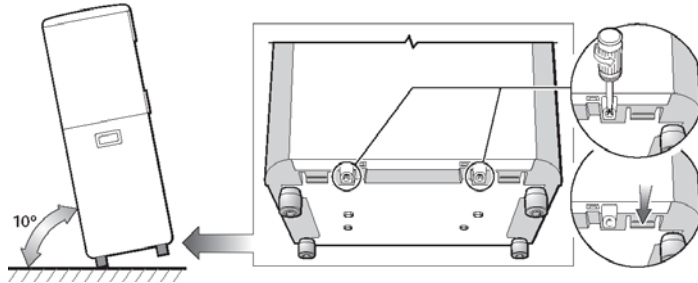


4. Loosen the two screws holding the filter head bracket to remove filter head bracket to access rear of filter heads.

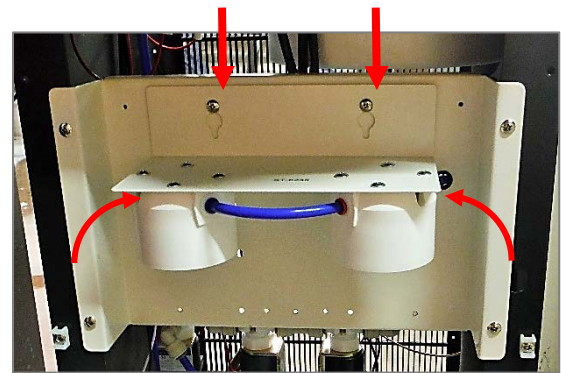

5. Disconnect tank line feed lines from hot and cold inlet solenoids at rear of filter head fittings).

6. Catch hot (hot water should have cooled down after dispensing 2 liters of water prior to the draining process) and cold water drain into basin or catch.

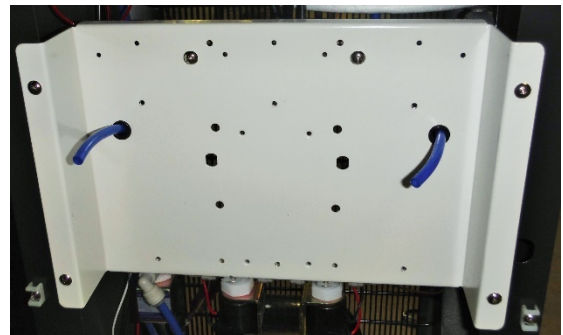

7. Reconnect tubing into inlet elbows once drained, and reinstall the filter head bracket.
8. Dry inside of unit if necessary.
9. Replace lower front panel.

INSTALLATION PROCEDURES

Safety and Installation Guidelines

Ensure all Local, State, and Federal Laws and Codes including health and safety guidelines are met when installing **Waterlogic** Equipment. Only qualified service technicians should attempt installation and service of **Waterlogic** Equipment.

- ⚠ WARNING! ELECTRICAL SHOCK HAZARD.** *Always unplug (isolate from power supply) to prevent electrical shock except where electrical tests are specified.*
- ⚠ WARNING! IMPROPER SUPPLY OR CONNECTION CAN RESULT IN RISK OF SHOCK.** *Connect to a 15 amp 120V 60Hz properly grounded outlet (GFI is recommended). Ensure polarity is correct and always use a 3-prong outlet. Consult a qualified electrician if you have any questions.*
- ⚠ WARNING! USE ONLY Waterlogic SUPPLIED POWER CORD.** *Locate system within 5 feet of power supply. Never use an extension cord or adapter. Do not use a damaged power cord or plug. Keep power cord out of heavy traffic areas and away from heat sources. Do not, under any circumstances, remove ground prong or alter the power cord. Never pull the power plug from the outlet with a wet hand or allow the plug to get wet. Failure to use the supplied power cord will void UL Certification and Warranty.*
- ⚠ CAUTION! INDOOR USE ONLY.** *Never expose to direct sunlight, heat sources, or ambient air temperature above 100°F (37°C) or below 35°F (2°C). Install indoors and keep unit away from excessive humidity. Never expose to freezing temperatures. Ensure there is adequate clearance around the unit to allow refrigeration system condenser to dissipate heat. Warmer environments require more clearance around the unit. Minimum clearance around all surfaces of the machine is 2-inches. Installs where the ambient temperature exceeds 80°F, require a minimum of 4-inches clearance for proper heat dissipation and efficient operation.*
- ⚠ CAUTION! USE A WATER PRESSURE REGULATOR.** *Waterlogic will not be responsible for injury or damage caused by excessive water pressure. Operating pressure must be 40 psi to 60 psi. Be aware any of potential pressure surges caused by building/municipal pumping stations.*
- ⚠ CAUTION! USE UV STABILIZED SUPPLY LINES.** *Feed the unit with a potable ambient or cold water supply only. Feed water over 100° F (37°C) can damage the treatment components. Water block devices and external leak detectors are strongly recommended. Locate the unit as close to the water supply and the electrical connections as possible.*
- ⚠ WARNING! STORE AND TRANSPORT UNIT EMPTY. ALWAYS SANITIZE BEFORE USE.** *The unit must be completely drained and sealed before storing to avoid stagnation and reduce microbiological contamination (potential bacterial growth). Sanitize before use to eliminate any potential microbiological contaminants*

Pre-installation and sanitization procedures as prescribed in this manual must be performed before installing the **infiniti Water Treatment System**,

Always install indoors and place the **Waterlogic infiniti Water Treatment System**, on a firm, flat and stable surface.

1. Attach the water supply line to the 1/4" feed water inlet bulkhead fitting on the back of the unit. **Waterlogic** requires the use of a water pressure regulator. Water feed pressure must be between 40-60 psi. Turn on the water supply and check for leaks.

2. Check to ensure that the Red Heater Power Switch is the *O=OFF* position.

NOTE: Switches have internal LED that illuminates when placed in *I=ON* position.



3. Connect the power cord to the back of the **Waterlogic infiniti Water Treatment System**, and to a 120 Volt supply.

4. Fill the Cold Tank. Hold a container under the dispensing faucet, press and hold the main dispensing button until a continuous flow of water is obtained. Once a continuous flow is obtained, release the dispensing button. Cold tank is now full.

5. Fill the Hot Tank. Hold a container under the dispensing faucet. Press the Hot Select Button followed by the main dispensing button until a continuous flow of water is obtained. Once a continuous flow is obtained, release the main dispensing button. Hot tank is now full.

⚠ CAUTION! NEVER TURN ON HEATER BEFORE FILLING HOT TANK.

Red Heater Power Switch must be in the O=OFF position while the hot tank is empty. Damage could occur within one minute and the overload (high limit) will require manual reset if heater is turned on with an empty hot tank.

6. Move the **Waterlogic infiniti Water Treatment System**, into its final operating position. Be sure that a minimum of 2" clearance is maintained around both the sides and the back of the unit. This is important to allow proper airflow and heat exchange of refrigeration system.

7. Level unit using the adjustable feet to level if necessary. Never install on incline.

8. Turn the Red Heater Power Switch to *I=ON* position.



9. When the unit has reached its Hot Temp Set Point, the heater will cycle off. When the unit has reached its Cold Temp Set Point Temperature, the compressor will cycle off.

10. Once the unit is at the target temperature(s), sample the water to ensure water meets expectations and additional rinsing or adjustment is not required.

11. Check the unit for any leaks. External Leak Protection is always recommended.