


WL500 BASE CABINET DRAWING AND ASSEMBLY INSTRUCTIONS


Base Cabinet Kit AK-0005

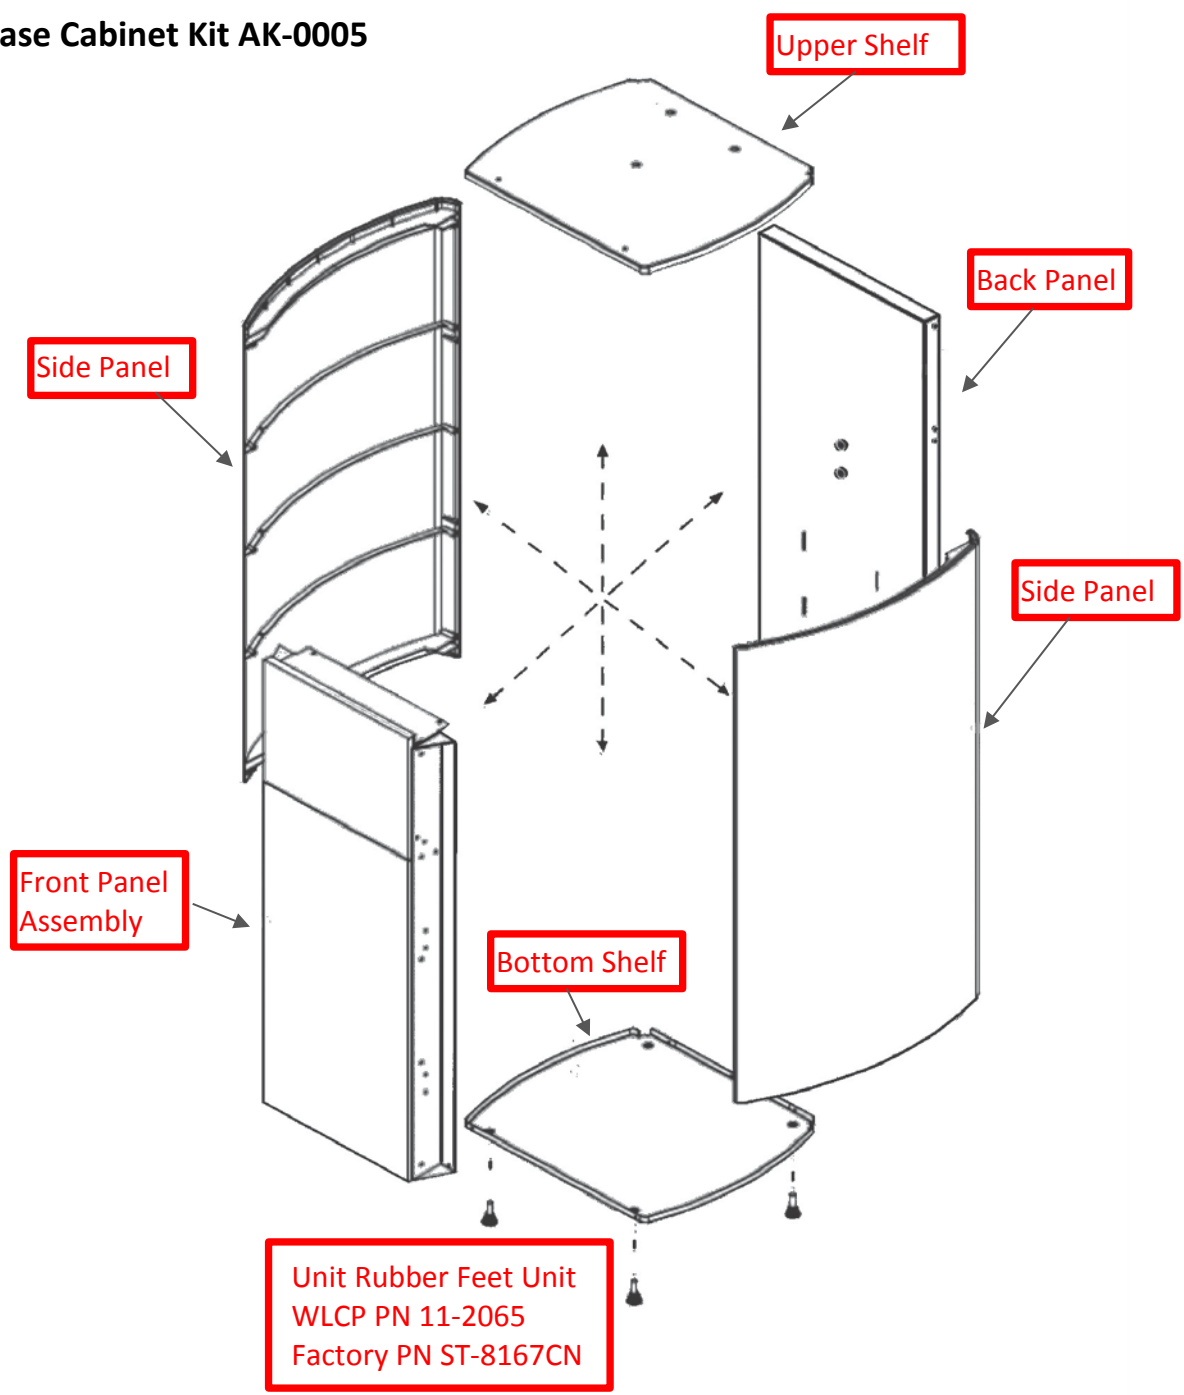

BASE CABINET (AK-0005) ASSEMBLY INSTRUCTIONS

Step 1


Install Unit Rubber Feed to the Bottom Shelf.

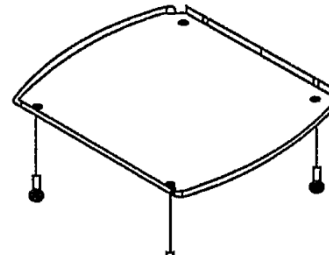

Step 2

Attach the Back Panel to the Bottom Shelf using 3 of the screws provided.


- The back lip of the Bottom Shelf has 3 holes.
- The front lip of the Bottom Shelf has 2 holes.

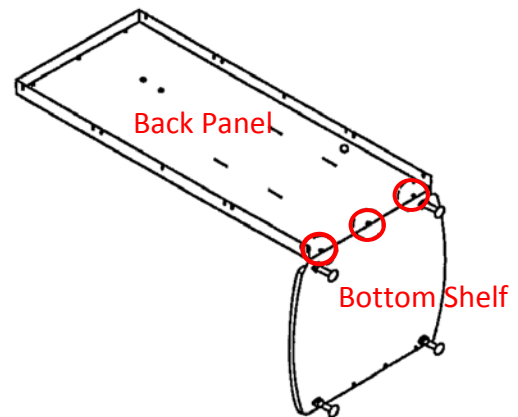

Step 3

Attach the Upper Shelf to the Back Panel using 3 screws provided.


- The back lip of the Upper Shelf has 3 holes.
- The front lip of the Upper Shelf has 2 holes.

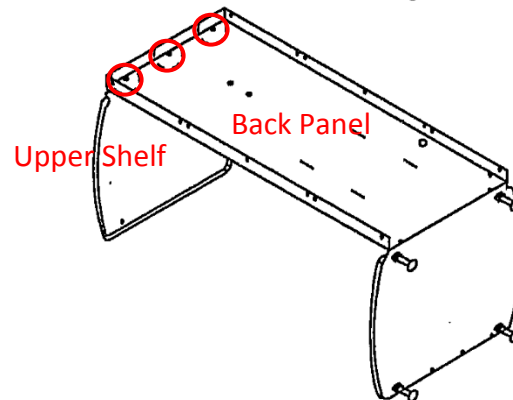

Step 4

Mount the Front Door and Frame Assembly to the front edges of the Upper and Bottom Shelves. Upper and Bottom Shelf edges fit inside of Door Assembly edges.


- 5 screws each at front and back edges
- 11 screws per Side Panel

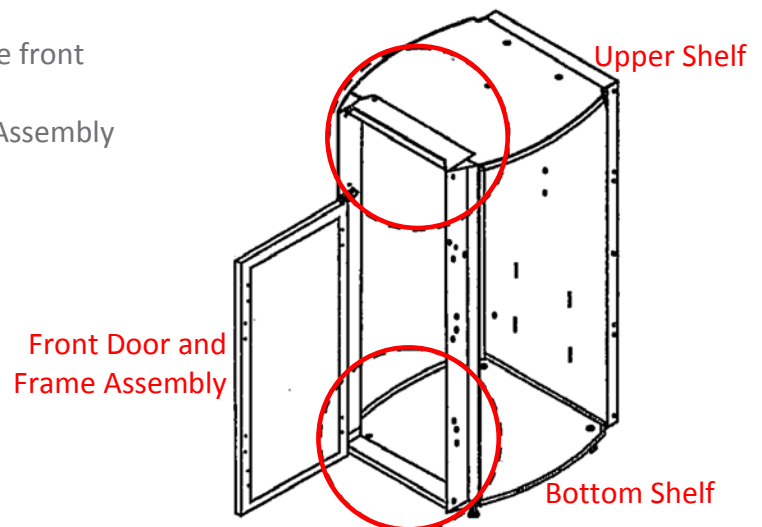

Step 5

Fasten the Side Panels to the frame.


- The Side Panels fit either side, with the sharper curved edge placed toward the rear.
- Align the side Panels using the plastic tabs that protrude through the metal frame.

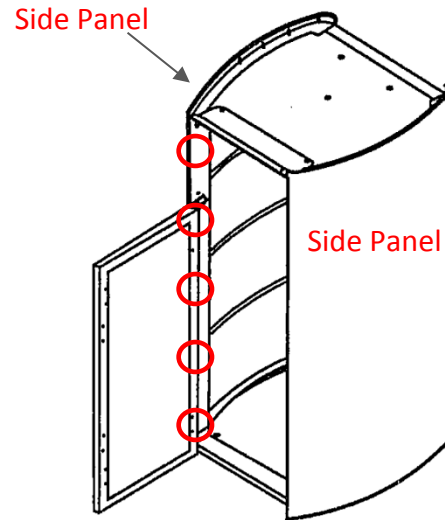

Step 6 - Front Panel Assembly Installation Assembly

Skip this step if the optional Cup Holder will be installed

- Attach the Blank Panel using 4 screws provided.

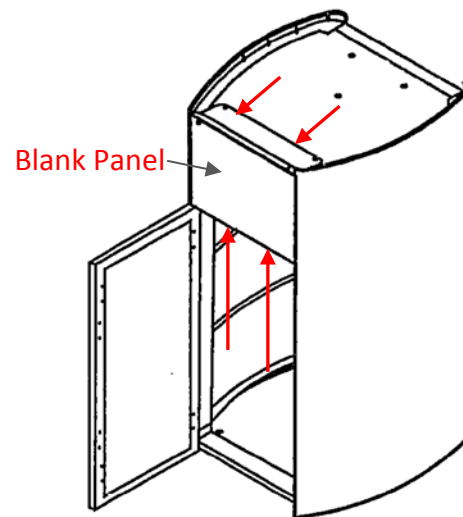

⚠ WARNING! DISPENSER COULD TIP OR FALL. Install unit on a firm, flat, and level surface and secure the **WL500 Water Treatment System** to the Base Cabinet with the Safety Screw (aka Lock Screw) provided to lock the components together. Never place heavy items on top of unit and never climb, stand, or hang on unit or storage cabinet to prevent injury and damage.

Step 7

Locate and align the **WL500 Water Treatment System** on top of the Base Cabinet.

- Lock together using the safety bolt (aka locking bolt) provided.

