

| No | WLCP Part No. | Description | Part No | Stocked? | |
|--------------------------------|---------------|---|-----------|----------|---|
| Consumables | | | | | |
| 1 | 10-2350 | UV Lamp 8W Assembly | CT-2083 | Yes |  |
| 2 | 10-1400 | Quartz Sleeve for 8W Lamp | CT-2002 | Yes |  |
| 3 | 19-1071 | Hot Tank Assembly 1.6 Liter 110V 600 W | HT-3028 | Yes |  |
| 3.1 | 19-2065 | Hot Tank Replacement Tube <i>Replace when replacing the Hot Tank</i> | AK-0067 | Yes |  |
| 4 | 19-1052 | Carbon Air Filter <i>Recommend stocking 2 each</i> | PU-4108 | Yes |  |
| Not Shown | 01-2076 | Scale Kleen | NA | Yes |  |
| Recommended Spare Parts | | | | | |
| 5 | 19-2025 | Black Drip Tray Grill | PL-1270 | Yes |  |
| | 19-1048 | Blue Drip Tray Grill | PL-1270-A | Yes |  |
| 6 | 19-2020 | Black Drip Tray Body | PL-1289-B | Yes |  |
| | 19-1032 | Blue Drip Body | PL-1289-F | Yes |  |
| 7 | 19-1050 | Hot Water Faucet Assembly <i>Recommend stocking 2 each</i> | PL-1260-D | Yes |  |
| 8 | 19-1051 | Ambient and Cold Faucet Assembly <i>Recommend stocking 2 each</i> | PL-1260-E | Yes |  |

| | | | | | |
|------|---------|---|--------------|-----|---|
| 9 | 19-1074 | Wire Harness Assembly <i>Recommend stocking 2 each</i> | EL-5079 | Yes |  |
| 10 | 10-2500 | Black O-Ring for Quartz Sleeve <i>Recommend stocking 2 each</i> | CT-2006 | Yes |  |
| 11 | 19-1079 | Overload with Manual reset 95 ° C / 203 ° F <i>Recommend stocking 2 each</i> | HT-3035 | Yes |  |
| 12 | 19-1078 | Hot Tank Thermostat 83° C/ 181° F <i>Recommend stocking 2 each</i> | HT-3034 | Yes |  |
| 13 | 12-6900 | Thermostat and Overload Metal Cover <i>Safety Cover for Hot Tank Overload and Thermostat</i> <i>Recommend stocking 2 each</i> | ST-8289 | Yes |  |
| 14 | 19-1042 | Mechanical Push Button for Ambient – Green <i>Recommend stocking 5 each</i> | PL-1264 | Yes |  |
| 15 | 19-1041 | Mechanical Push Button for Cold – Blue <i>Recommend stocking 5 each</i> | PL-1263 | Yes |  |
| 16 | 19-1040 | Push Button for Hot (Right) – Red <i>Recommend stocking 5 each</i> | PL-1262 | Yes |  |
| 17 | 19-1043 | Hot Safety Push Button (Left) – Red <i>Recommend stocking 5 each</i> | PL-1265 | Yes |  |
| 18 | 19-1002 | Main PCB <i>Recommend stocking 4 each</i> | EN-6112 | Yes |  |
| 19 | 19-1001 | Inlet Solenoid valve 120V <i>Recommend stocking 2 each</i> | PU-4096 | Yes |  |
| 19.1 | CU-0001 | Solenoid Cushion <i>Recommend stocking 2 each</i> | CU-0001 | Yes |  |
| 20 | 10-3010 | UV Lamp Ballast 110V/60Hz <i>Recommend stocking 2 each</i> | EL-5006-A CN | Yes |  |






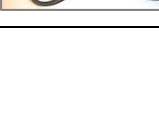
| | | | | | |
|------------------------|---------|--|----------------|-----|---|
| 21 | 19-1069 | Cold Tank Thermostat <i>Recommend replacing the Cold Thermostat Cover Label at the same time.</i> <i>Recommend stocking 2 each</i> | CT-2070-A | Yes |  |
| 21.1 | LP-0326 | Cold Thermostat Cover Label <i>Recommend stocking 2 each</i> | LP-0326-L00-00 | Yes |  |
| Remaining Parts | | | | | |
| 22 | 19-5005 | Black Top Cover | PL-1254 | Yes |  |
| | 19-1033 | Blue Top Cover | PL-1254-A | Yes |  |
| 23 | 19-1038 | Reservoir Cover | PL-1259 | Yes |  |
| 24 | 19-1019 | Side Panel Silver | ST-8212 | Yes |  |
| 25 | 19-1034 | Top Front Panel for Drip Tray <i>*Also order Hot Water Safety Sticker – P/N LP-7169 WLCP PN 12-0001</i> | PL-1255 | Yes |  |
| 25.1 | 12-0001 | Hot Water Safety Sticker | LP-7169 | Yes |  |
| 26 | 19-1014 | Front Panel Display Sticker | LP-7180 | Yes |  |
| 27 | 19-5010 | Black Top Front Insert Panel | PL-1257 | Yes |  |
| | 19-1036 | Blue Top Insert Panel | PL-1257-A | Yes |  |

| | | | | | |
|------|---------|------------------------------------|------------|-----|---|
| 28 | 19-5015 | Black Front Bottom Panel | PL-1149-A | Yes |  |
| | 19-1031 | Blue Front Bottom Panel | PL-1149-B | Yes |  |
| 29 | 19-1035 | Front Bottom Panel - Silver | PL-1256 | Yes |  |
| 30 | 19-1049 | Leak Tray | PL-1292 | Yes |  |
| 31 | 19-1021 | Side Panel Bracket | ST-8229 | Yes |  |
| 32 | 12-1602 | Bottom Shelf | ST-8035 | Yes |  |
| 33 | 10-2200 | Compressor (R134a 1/8HP) 120V/60Hz | CO-9001-A | Yes |  |
| 33.1 | 10-5018 | Compressor Overload | CO-9015 | Yes |  |
| 33.2 | 10-3003 | Compressor Starter Relay | CO-9016 | Yes |  |
| 34 | 19-1025 | Leak Level Sensor Bracket | ST-8232 | Yes |  |
| 35 | 10-3099 | 3" Filter Clip | PU-4024 | Yes |  |
| | 10-3098 | 2" Filter Clip for In-Line Filter | PU-4025 | Yes |  |
| 36 | 19-1016 | Filter Bracket | ST-8206-CN | Yes |  |

| | | | | | |
|------|----------------|---|----------------|-----|---|
| 37 | 14-5011 | Drain valve cap only (for 5/16" & 1/4" size) | CT-2028 | Yes |  |
| 37.1 | 19-1049 | Rubber O-Ring for Drain Hole | PL-1293 | Yes |  |
| 37.5 | NA | Drain Valve Clamp 5/16" | CT-2046 | No |  |
| 38 | 10-3083 | Unit Rubber Feet | ST-8016 | Yes |  |
| 39 | 19-1030 | Side Panel Plastic Handle | PL-1123 | Yes |  |
| 40 | 19-1020 | Inlet Solenoid Valve Fixing Bracket | ST-8214 | Yes |  |
| 41 | 19-1026 | Cover of Inlet Solenoid Valve | ST-8233 | Yes |  |
| 42 | 19-1008 | Inlet Solenoid Valve JG Adaptor 1/4 (CI320816S) | PU-4104 | Yes |  |
| 43 | 19-1000 | Wire Condenser for Gravity Fed | CO-9040 | No |  |
| 44 | 19-1022 | Back Panel Access Panel for Electronics Service <i>*Cannot replace due to the certification labeling required.</i> | ST-8230 | No |  |
| 45 | EL-0061-L00-00 | Socket for Plug Connection | EL-0061-L00-00 | Yes |  |
| 45.1 | 19-1015 | Gasket for Power Socket | ST-8052 | Yes |  |
| 46 | 10-3014 | Fuse Holder and Fuse 120V / 15A with One Wire | EL-5053 | Yes |  |

| | | | | | |
|------|---------|---|---------|-----|---|
| 46.1 | 10-3013 | Fuse 120V / 15A | EL-5010 | Yes |  |
| 47 | 10-3008 | Red Compressor and Heater Switch | EL-5004 | Yes |  |
| 48 | 19-1017 | Silver Back Panel <i>*Cannot replace due to the product identification, traceability of machine manufacturing.</i> | ST-8210 | No |  |
| 49 | 19-1018 | Upper Shelf | ST-8211 | Yes |  |
| 50 | 12-1210 | UV Lamp Retaining Threaded Nut | PL-1128 | Yes |  |
| 51 | 19-1057 | Silicon seal - for Inlet Port to Tanks | PU-4109 | Yes |  |
| 52 | 19-1039 | Water Inlet to Port to Tanks | PL-1261 | Yes |  |
| 53 | 12-8006 | Hot Tank Fixing Bracket 400mm for 1.6L | ST-8120 | Yes |  |
| 54 | 19-1070 | 4 Liter Cold Tank | CT-2068 | No |  |
| 55 | 19-1076 | Air filter Silicon Cap | PL-1290 | Yes |  |
| 56 | 19-1056 | Reservoir Cover Seal (Silicon) | PU-4099 | Yes |  |
| 57 | 19-1004 | Water Level Controller with Wire | PU-4100 | Yes |  |

| | | | | | |
|-----------|---------|---|------------|-----|---|
| 58 | 19-1072 | Floater Assembly | PU-4097 | Yes |  |
| 58.1 | 19-1073 | Floater fitting & Nut for Gravity | PU-4098 | Yes |  |
| 58.2 | 19-1005 | Leak Detection Floats Connection | EL-5131 | Yes |  |
| 59 | 19-1037 | Plastic Reservoir - 3 Gallons | PL-1258 | Yes |  |
| 60 | 19-1046 | Faucet Push pin | PL-1268 | Yes |  |
| 61 | 19-1044 | Hot Safety Push Button pin | PL-1266 | Yes |  |
| 62 | NA | Faucet Spring | PL-1260-A6 | No |  |
| 63 | 19-1047 | Faucet Bracket | PL-1269 | Yes |  |
| 64 | 19-1045 | Hot Safety Push Button Safety Lock | PL-1267 | Yes |  |
| 65 | NA | Display PCB Cover | PL-1347 | No |  |
| Not Shown | 19-1023 | RO Rail Bracket - Left Hand Side | ST-8231-A | Yes |  |
| Not Shown | 19-1024 | RO Rail Bracket - Right Hand Side | ST-8231-B | Yes |  |
| Not Shown | 19-1074 | Wire Harness Assembly | EL-5079 | Yes |  |
| Not Shown | 10-3062 | JG LLDPE Tube - Blue 8mm John Guest P/N PE-0806-100M-B | PU-4014-A | Yes |  |

| | | | | | |
|-----------|--------------------------|---|-----------|-----|--|
| Not Shown | Purchase from John Guest | JG LLD PE Tube - Blue O.D.1/4"John Guest P/N PE-08-BI-1000F-B | PU-4031A | No |  |
| Not Shown | 19-1099 | Tubing – Room Temp Water to Faucet | NA | Yes |  |
| Not Shown | 10-7040 | Silicon Tube 5/16" for Hot Water | PU-4064 | Yes |  |
| Not Shown | 19-1003 | Straight Connector for Silicon Tube | PU-4101 | Yes |  |
| Not Shown | 19-1058 | Silicon Elbow Tube 25*40 | PU-4110 | Yes |  |
| Not Shown | 10-3007 | Power Cord 120V – 1825 mm | EL-5001-B | Yes |  |